 



Machine Management

To select and configure a machine, tap the left drawer icon, then tap **Machine Management**.




NOTE – This is a locked item. As with all locked items, must tap the button **seven times** in rapid succession to access the **Machine Management** dialog. A machine must be present before receiving GNSS corrections.

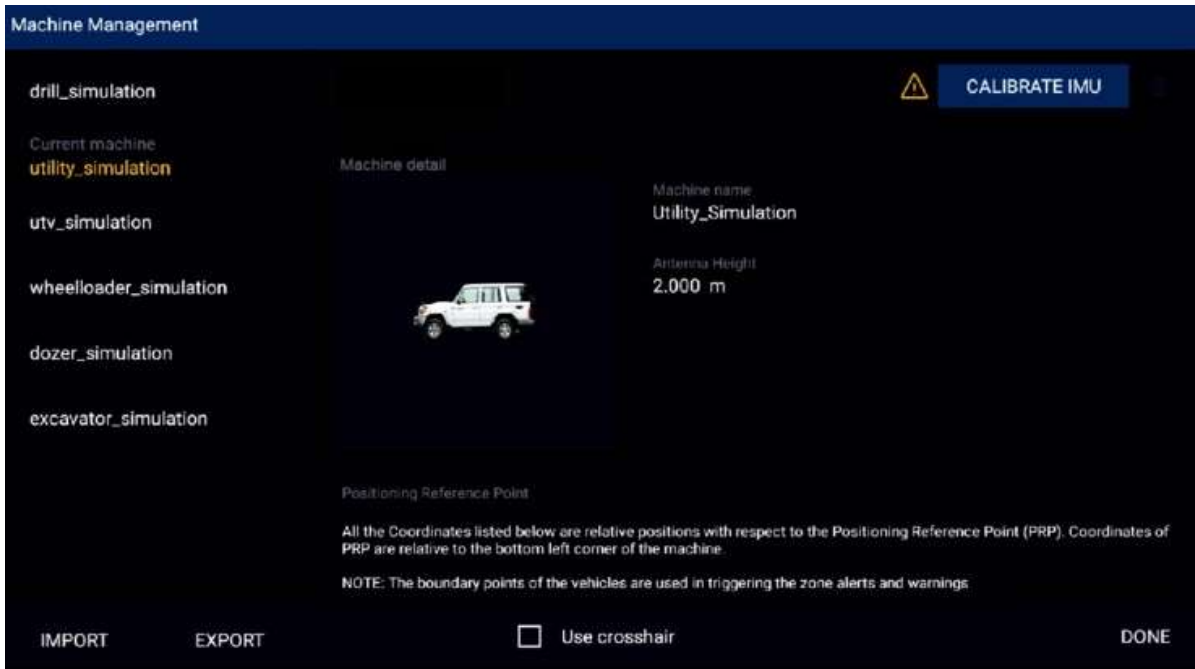

On the **Machine Management** dialog, you can select or delete any existing machine or import/export configuration files, which contain machine configuration details, to/from a USB or add a new one.

Selecting a machine – Existing machines are listed at the left of the dialog. Tap on the machine name to select it. What you can do with the project depends on whether this is the current project or not.

A machine can be deleted from the list by pressing the  button, so long as it is not configured as the current machine.

IMPORT

You can add a machine by importing it if the defining XML and PNG files exist on an attached USB stick. You are prompted to browse the USB to the folder where the XML file(s) are contained.

EXPORT

You can export any/all current machines to the USB stick if required. The XML files are placed in a 'machines' folder of the USB.

SET AS CURRENT MACHINE

Once imported, select the desired machine from the list and press this button to make it the current machine.